 
 
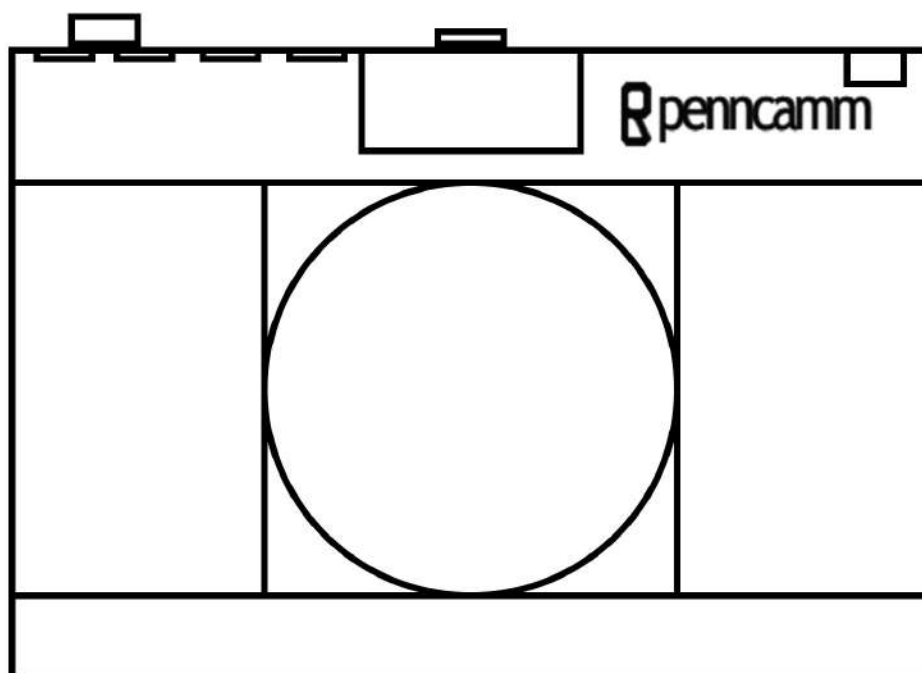 
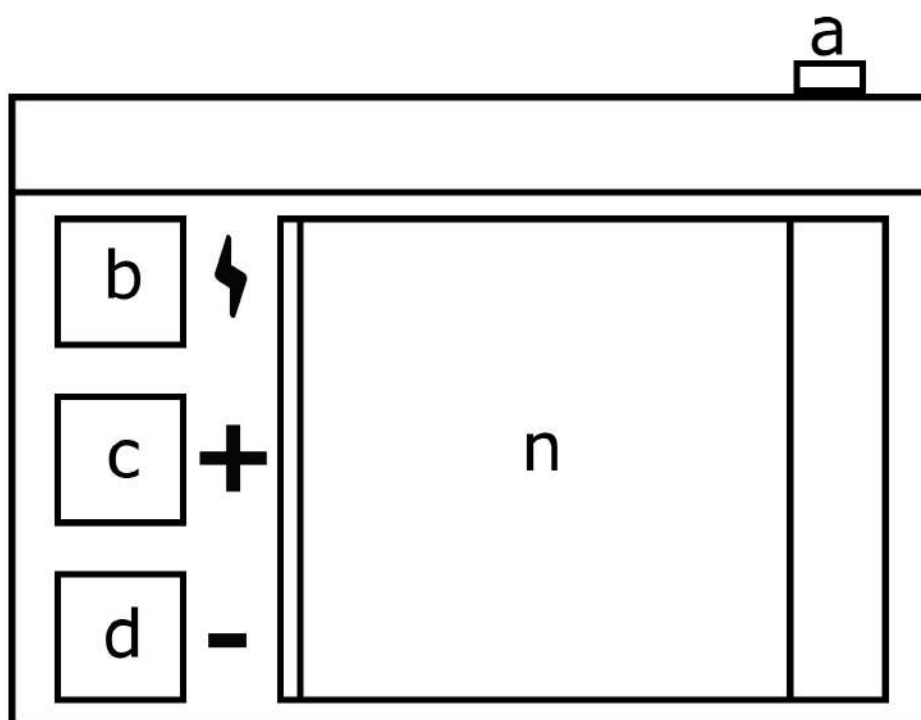 
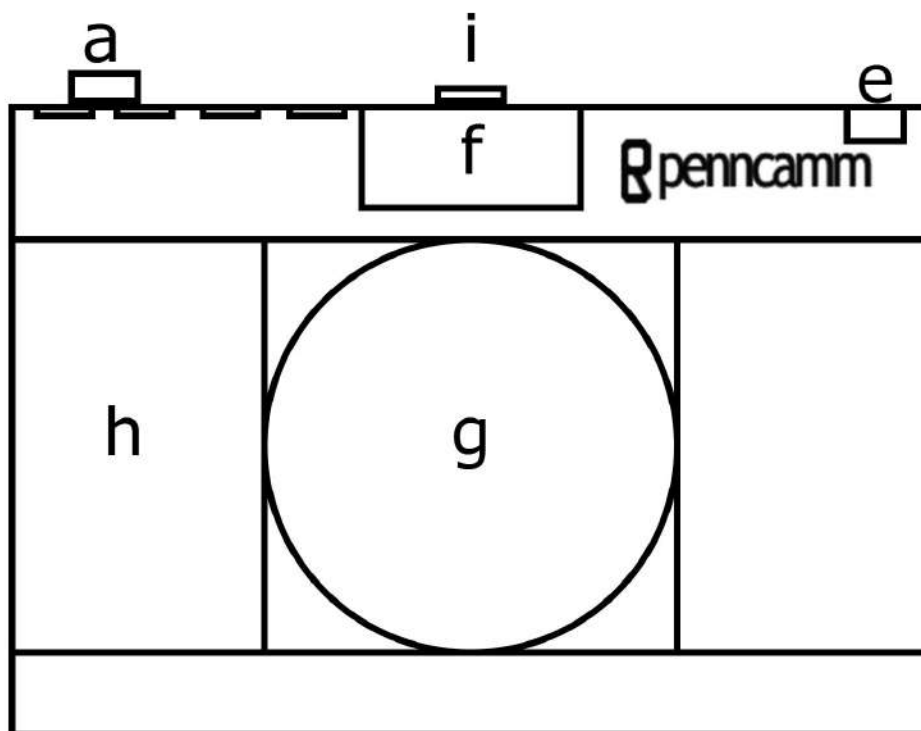 


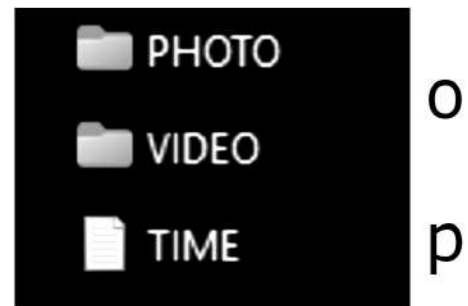

Manual
Documentation
Maintenance

For

PennCamm
MKI GEN2

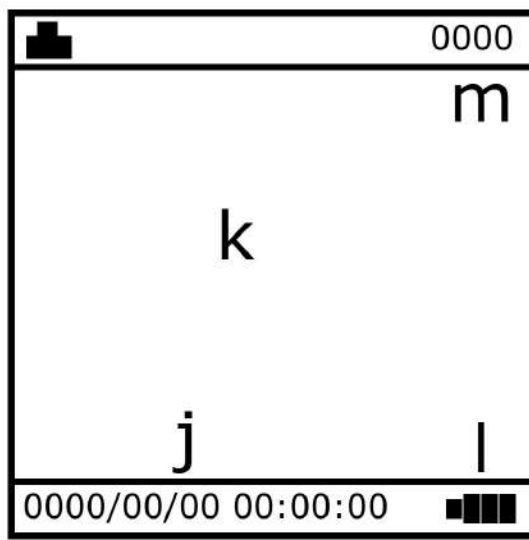

- a** - Shutter/Hold for Power
- b** - Hold for Flash
- c** - Filters/Next Photo
- d** - Mode (Pic, Vid, Mem)/Hold for return
- e** - Key Hole
- f** - Flash
- g** - Camera
- h** - Wrap
- i** - Mounting Screw
- j** - Time/Date
- k** - Display
- l** - Battery
- m** - Remaining Storage
- n** - Display
- o** - Stored Photos & Videos
- p** - Time/Date Settings

Errors

- No SD card | Re insert card or faulty card
- SD card error | Reformat card to FAT32 (NOT exFAT)

Problems

- Colors showing in place of camera | Needs physical repairs, camera connector came loose.

Difficulty: 3/5

- Shutter button (a) not working | Joint came loose, can be fixed with a switch rotation, loosen nut and wiggle until it snaps into place, could need physical repairs.

Difficulty: 1/5 or 5/5

- Boot looping | Shutter button joint came loose, can be fixed with a switch rotation, loosen nut and wiggle until it snaps into place.

Difficulty: 1/5

- Wrap peeling (h) | Glue back with wood glue or super glue.






Difficulty: 1/5

- Keyhole break | Replace upper case, remove side screws, lift up and forward. Contact PennCamm for replacement part, (Priced around twice frame price), install new upper case. Short screw on side of camera with ring, Long screw on other.

Difficulty: 2/5


For other problems, please contact
PennCamm.

cam@pennbrenn.com

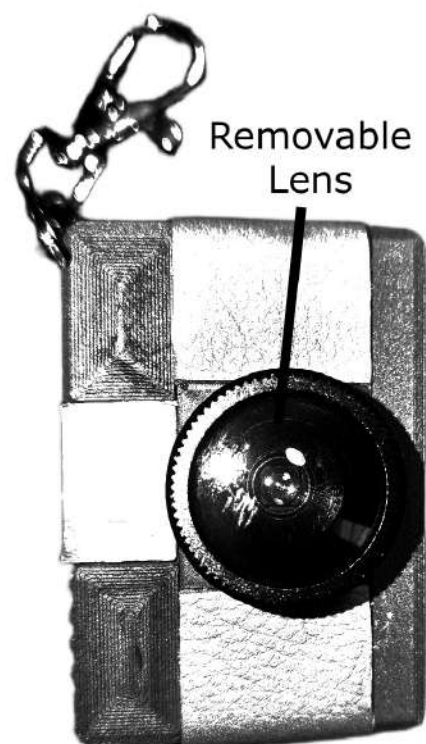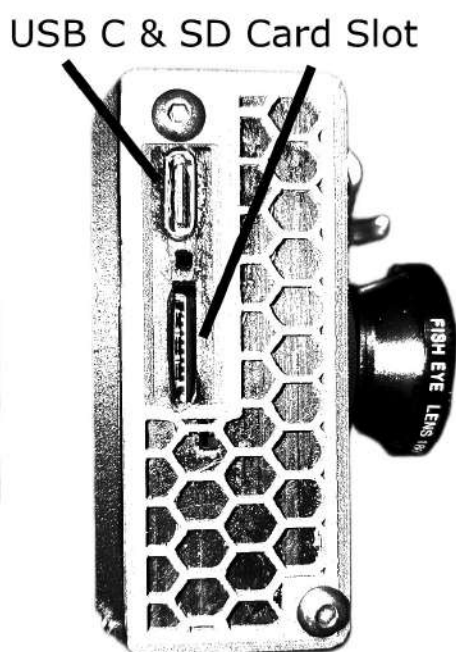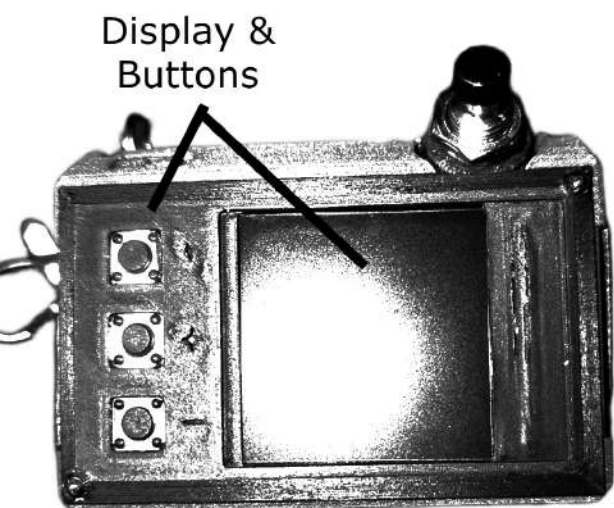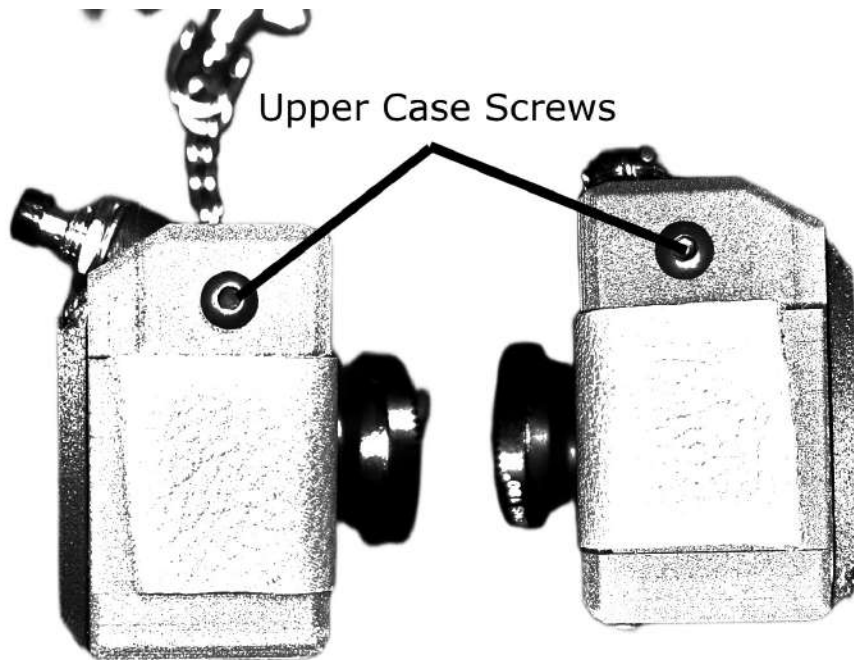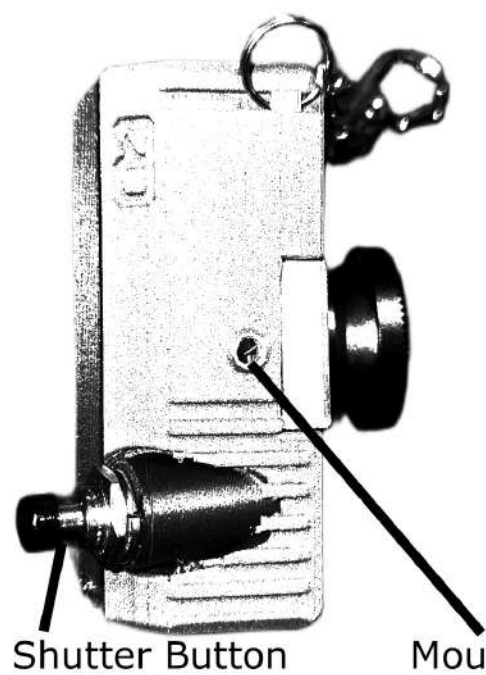

Thank you for choosing PennCamm!

See website:

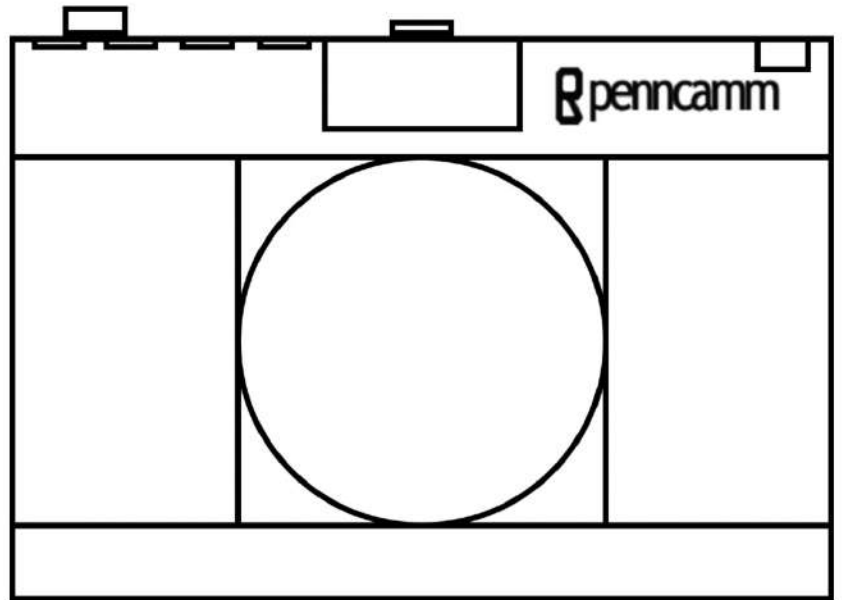

cam.pennbrenn.com

Questions? Concerns? Suggestions?
Contact us!

cam@pennbrenn.com

IG: [@penncammofficial](https://www.instagram.com/penncammofficial)